

# KENWOOD

## KCA-RC406

---

REMOTE CONTROL UNIT

**INSTRUCTION MANUAL**

TELECOMMANDE

**MODE D'EMPLOI**

FERNBEDIENUNG

**BEDIENUNGSANLEITUNG**

AFSTANDBEDIENING

**GEBRUIKSAANWIJZING**

TELECOMANDO

**ISTRUZIONI PER L'USO**

UNIDAD DE CONTROL REMOTO

**MANUAL DE INSTRUCCIONES**

ПУЛЬТ ДИСТАНЦИОННОГО УПРАВЛЕНИЯ

**ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ**

リモートコントロールユニット

**取扱説明書**

JVCKENWOOD Corporation



# Function and Operation for KCA-RC406

## General control

- Volume control: [VOL]
- Source select: [SRC]  
Press and hold to turn off the power.
- Volume reduce: [ATT]  
When the button is pressed again, the volume returns to the previous level.
- Return to previous item: [↶]
- Selection of item: [▲]/[▼]
- Determination: [ENT]
- Enter Audio Control mode: [AUD]

## On Tuner/HD Radio™ (USA only) source

- Band select: [FM]/[AM]
- Station select: [◀◀]/[▶▶]
- Recall preset stations: [0] — [9] → [ENT]  
/ [1] — [6]
- Enter Direct Access Tuning mode: [DIRECT/OK]

## On CD/Audio file source

- Music select: [◀◀]/[▶▶]
- Folder select: [FM]/[AM]
- Pause/Play: [ENT]
- Enter Music Search mode: [▲]/[▼]
- Movement between folders/files during Search mode: [▲]/[▼]
- Return to previous folder: [↶]
- Enter Direct Music Search mode: [DIRECT/OK]

## On iPod source

- Enter Music Search mode: [▲]/[▼]
- Movement between items during Search mode: [▲]/[▼]
- Return to previous item: [↶]
- Pause/Play: [ENT]

## On SiriusXM tuner source (USA only)

- Channel select: [◀◀]/[▶▶]
- Recall preset stations: [0] — [9] → [ENT]

## Hands-free phone control

### Making a call

- Enter Bluetooth mode: [☎]
- Select a dialing method: [▲]/[▼] → [ENT]
- Number dial input:  
Input a digit: [0] — [9]  
Input "+": [▶▶]  
Input "#": [FM]  
Input "\*": [AM]  
Clear the entered phone number: [◀◀]
- Make a call: [☎]/[DIRECT/OK]

### Receiving a call

- Answer the call: [☎]

 
### Call waiting

- Answer Another Incoming Call with the Current Call Suspended: [☎]

### During a call

- End the call: [☎]/[SRC]

## Preparing the remote control unit



Pull the battery sheet out from the remote control unit to the direction of the arrow.

## Changing the battery of the remote control unit

- Keep on slide
- 
- Use a commercially available button battery (CR2025). Insert the battery with the + and - poles aligned properly, following the illustration inside the case.



- This unit cannot control the function that isn't included in the car audio.

### ⚠ CAUTION

- Keep battery out of reach of children and in original package until ready to use. Dispose of used batteries promptly. If swallowed contact physician immediately.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not set the remote control in hot places such as on the dashboard.
- Danger of explosion if Lithium battery is incorrectly replaced. Replace only with the same or equivalent type.

# KCA-RC406

---

