

KENWOOD

KNA-RCDV330

REMOTE CONTROL UNIT

INSTRUCTION MANUAL

TELECOMMANDE

MODE D'EMPLOI

FERNBEDIENUNG

BEDIENUNGSANLEITUNG

AFSTANDSBEDIENING

GEBRUIKSAANWIJZING

TELECOMANDO

ISTRUZIONI PER L'USO

UNIDAD DE CONTROL REMOTO

MANUAL DE INSTRUCCIONES

UNIDADE DE CONTROLO REMOTO

MANUAL DE INSTRUÇÕES

遥控器

使用说明书

리모컨 유닛

조작 매뉴얼

Kenwood Corporation

KNA-RCDV330

 
This unit cannot control the function that isn't included in the car audio.



- Put the Remote Controller in a place where it will not move during braking or other operations. A dangerous situation could result, if the Remote Controller falls down and gets wedged under the pedals while driving.
- Do not place the battery near an open flame or heat source. This may cause the battery to explode.
- Do not recharge, short, break up or heat the battery or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.
- Place the battery out of reach of children. In the unlikely event that a child swallows the battery, immediately consult a physician.
- Do not set the remote on hot places such as on the dashboard.

Battery installation


Use two "AAA"/"R03"-size batteries.
Slide the cover while pressing downwards to remove it as illustrated.
Insert the batteries with the ⊕ and ⊖ poles aligned properly, following the illustration inside the case.

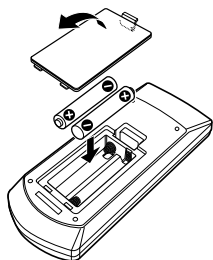

- If the Remote Controller operates only over shorter distances or does not operate at all, it is possible that the batteries are depleted. In such instances, replace the both batteries with new ones.

Remote Controller mode switch

 The functions operated from the remote controller differ depending on the position of the mode switch.

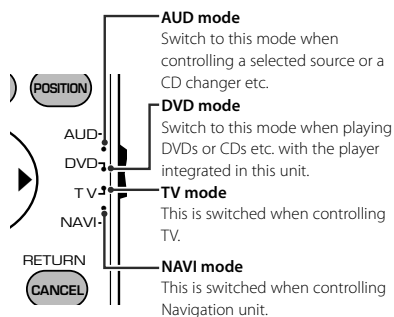


- The position of the remote control mode switch is indicated in the title of each mode, e.g., "(AUD mode)".
- When controlling a player that is not integrated in the unit, select "AUD" mode.

Common operations (AUD mode)


Source switching

 Switches to the source to be played.




Volume control

 Adjusts the volume.



Volume attenuator

 Press the key once to lower the volume. Press again to restore the previous volume.



Dual Zone

Switches the Dual Zone function ON and OFF.



Rear volume control

 
Adjusts volume at rear when the Dual Zone function is ON.



V.SEL

Switch video

Switches the video each time it is pressed.



Display angle (DDX)

Switches the display angle each time it is pressed.

 
OPEN (KVT)

Opens or closes the monitor each time it is pressed.




Cursor key

Moves the cursor when displaying menu.



ENTER

 Enters options.



Hands-free communication

Enters the dialing method selection mode.

When a call comes in, it answers the call.



Function

Switches the function screen.



MODE

Switches the screen mode.

 
Screen mode changes each time you press this key.



Radio (AUD mode)


Band switching

Switches to bands received by the unit.




Station selection

 Switches to broadcast stations received by the unit.



Direct tuning

 After pressing this key, use the keypad to specify the broadcast station you wish to receive.




Example: 92.1MHz (FM)



Example: 810kHz (AM)



 Numeric keypad

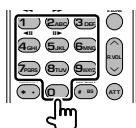


- To use preset tuning, press the number of a programmed broadcast station. (1 - 6)
- Press the direct tuning key first, then specify the frequency of the station to receive.

DVD/DVD Audio/VCD/CD/Audio files (DVD mode)


Folder search

 Selects the folder to be played.



Track search and file search

 
Selects the track or file to be played.



Play/Pause

Pauses the track.

 
Press again to resume playing.




Stop

Memorizes the last point where the disc stopped.

 When pressed again, the last point is deleted.



Direct search

 

Pressing this button switches the features that can be searched directly.

DVD

Title number

Chapter number

Play time

Item number*

Cancel

* You may not be able to use this function with some discs or scenes.

DVD Audio

Group number

Track number

Item number*

Cancel

* You may not be able to use this function with some discs or scenes.

CD

Track number

Play time

Cancel

Audio files

Folder number

File number

Cancel

VCD 1.X, VCD 2.X (PBC OFF)

Track number


Cancel

VCD 2.X (PBC ON)

 
Scene number

 

 

Number

Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press  [ENTER] key.

Numeric keypad

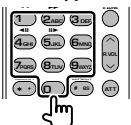

- Specify the number to search in direct search.
- Press   to fast forward/backward. Switches the fast forward/backward speed each time you press this key.
- Press   to slow forward/backward. Switches the slow playback speed each time you press this key.

DVD Top Menu

Returns to the DVD top menu.



DVD Menu

Displays the DVD menu.

Turns the playback control on or off while playing VCD.



 
Subtitle

Switches the subtitle language.




Zoom

Switches the zoom ratio each time you press this key.



Picture Angle

 Switches the picture angle each time you press this key.



AUDIO

 
Switch Voice Language

Switches the voice language each time you press this key.




iPod (AUD mode)**Music/Video search**

Selects the music/video to be played.


**Play/Pause**

Pauses the music/video.

 
Press again to resume playing.

**USB (AUD mode)****Folder search**

 Selects the folder to be played.


**File search**

 Selects the file to be played.


**Play/Pause**

Pauses the file.

 
Press again to resume playing.

**TV (TV mode)****Switching Band/Video**

 
Switches between the station of the TV band to receive and video input.

**Channel Selection**

 Selects the TV channel to be received.


**Direct tuning**

 (Function of NTSC TV type only)



Press this key first, and then specify the station to receive with the numeric keypad.

 Example: In case of Channel 6 (2-digit)

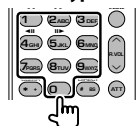
**Numeric keypad**

- The number of the memorized station is selected. (1 - 9)
- Press the direct tuning key first, then specify the channel of the station to receive.

NAVI (NAVI mode)


Joystick

 Scrolls the map, or moves the cursor.




ENTER

 Performs the selected function.




Zoom

 Zooms in or out the navigation map.




MENU

 Displays Main menu.




CANCEL

 Displays previous screen.



POSITION

 Displays the current position.



ROUTE M

Displays Route Option menu.



VIEW

Switches between 2D and 3D map displays.



VOICE

Plays Voice guidance.



MAP DIR

Switches between the heading up navigation and north up navigation map displays.



Hands-free communication

Enters the dialing method selection mode.
When a call comes in, it answers the call.



Information on Disposal of Old Electrical and Electronic Equipment (applicable for EU countries that have adopted separate waste collection systems)



Products with the symbol (crossed-out wheeled bin) cannot be disposed of as household waste.

Old electrical and electronic equipment should be recycled at a facility capable of handling these items and their waste byproducts. Contact your local authority for details in locating a recycle facility nearest to you. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment.