


## • Peugeot 308

Compatible with these Kenwood double DIN devices

### Kenwood Navigation

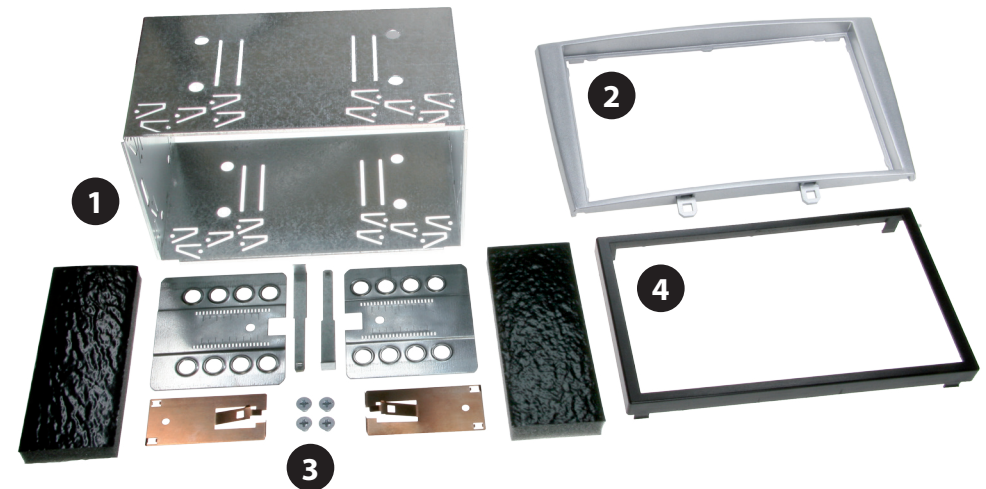


Double DIN Kit contents

- (1) Metal Frame
- (2) Facia Plate

- Installation Kit (3)
- Trim Frame (4)

## Installation Manual Double DIN Kit CAW 2040-01 / CAW 2040-01-RT

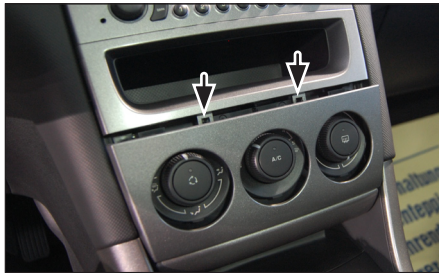


1. Dismount panel cover of the air condition control unit.




2. Remove pocket below OEM head unit.

*(We recommend to use a plastic wedge).*

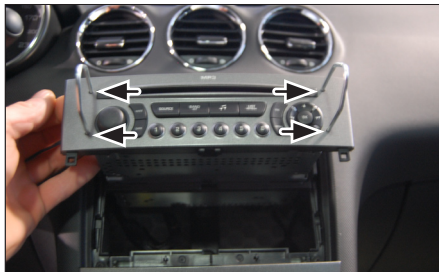


3. Insert two radio release keys in the openings of the OEM head unit.

Remove the OEM head unit.

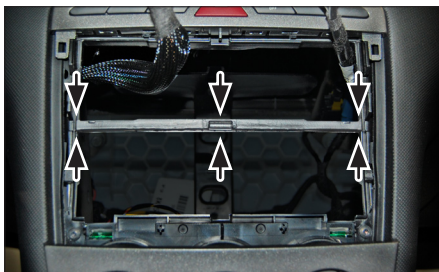


4. Remove middle bar to clear space for the Double DIN head unit.

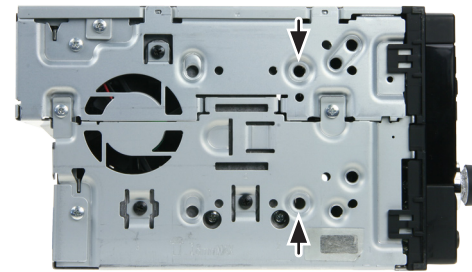

(Beispielabbildung)

Mount the metal brackets with the double DIN head unit

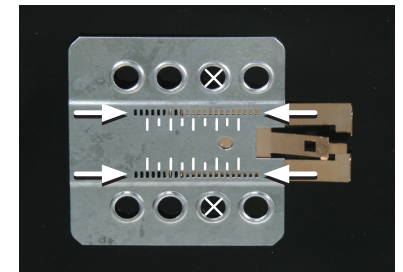

(Beispielabbildung)

*The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)*



5. Place fascia plate on the dashboard.

Push the Metal Frame into the fascia plate

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.

*All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*