


8. Remove the centre panel



9. Remove the four Torx screws (2 on each side) holding the OEM head unit.

Remove the OEM head unit.

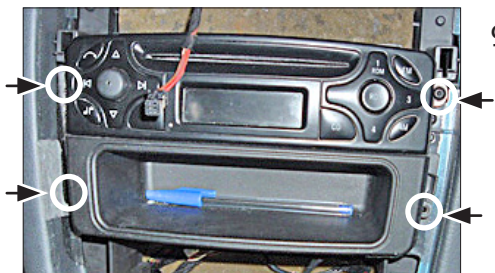

10. Place the facia plate and fix it with the 4 original screws.

Push the metal frame into the facia plate.

Connect all required circuit points and push the double DIN head unit until it snaps in.

Place the trim frame.

Reinstall everything in reverse order to finish installation.

## Installation Manual Double DIN Kit

# KENWOOD


Standard: CAW 2190-02

Rubber-Touch: CAW 2190-02-RT

### • Mercedes C-Class (W203) → 2004

Compatible with these Kenwood double DIN devices

**Kenwood Navigation**

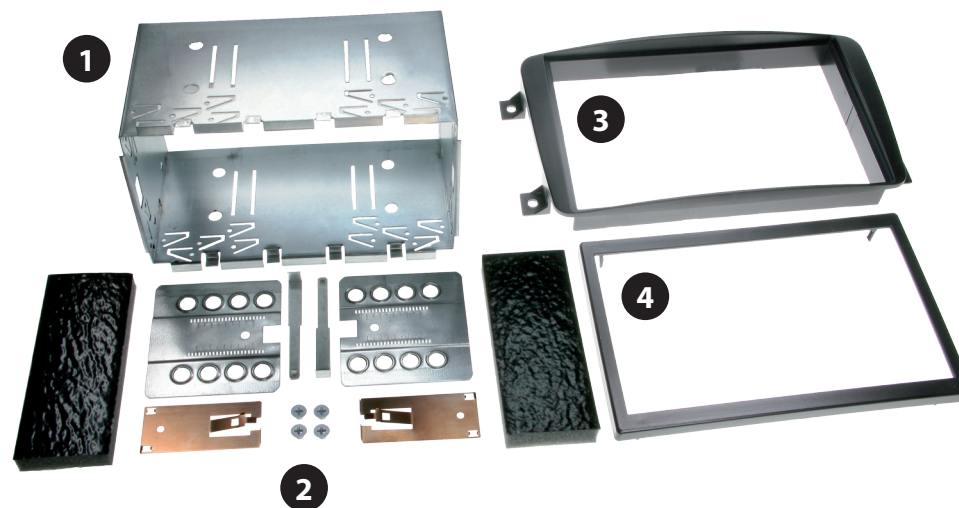

Double DIN Set contents

- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate
- (4) Trim Frame




1. Mercedes C-Class with OEM head unit.



2. Remove panel by lifting it up.




3. Remove the ash tray unit which is held by 2 clips.

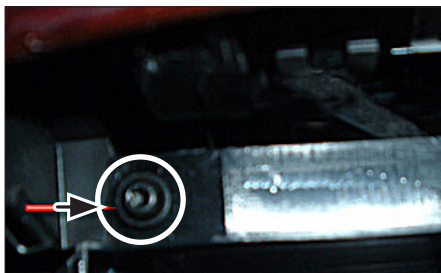

4. Remove the 2 screws, located under the air conditon control switches.



5. Unclip the air vent unit carefully on both sides with a screw driver.

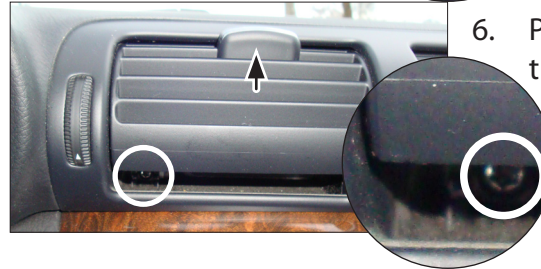


6. Pull up the air vent and remove the 2 screws (left and right) which become visible.




7. Pull down the air vent and unclip the whole unit at both sides carefully with a screw driver.

Remove the air vent unit.

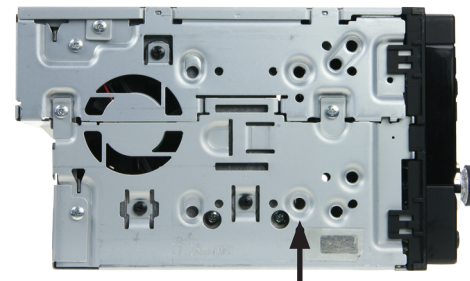

Mount the metal brackets with the double DIN head unit

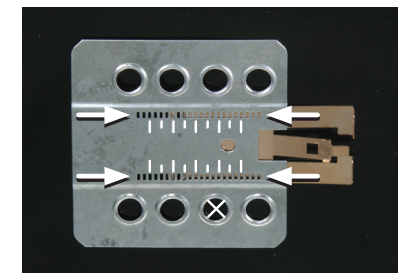

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)

All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.