

## Installation Manual Double DIN Kit CAW 2190-25-RT



6. Place the fascia plate on the dashboard.

Place the metal frame into the fascia plate.



7. Connect all required circuit points to the Kenwood head unit and push it into the metal frame until it snaps in. Place the trim frame.

Reinstall everything in reverse order to finish installation.


# KENWOOD

## Installation Manual Double DIN Kit CAW 2190-25-RT

### • Mercedes SL-Class (R230) 2004 →

Compatible with these Kenwood double DIN devices


#### Kenwood Navigation

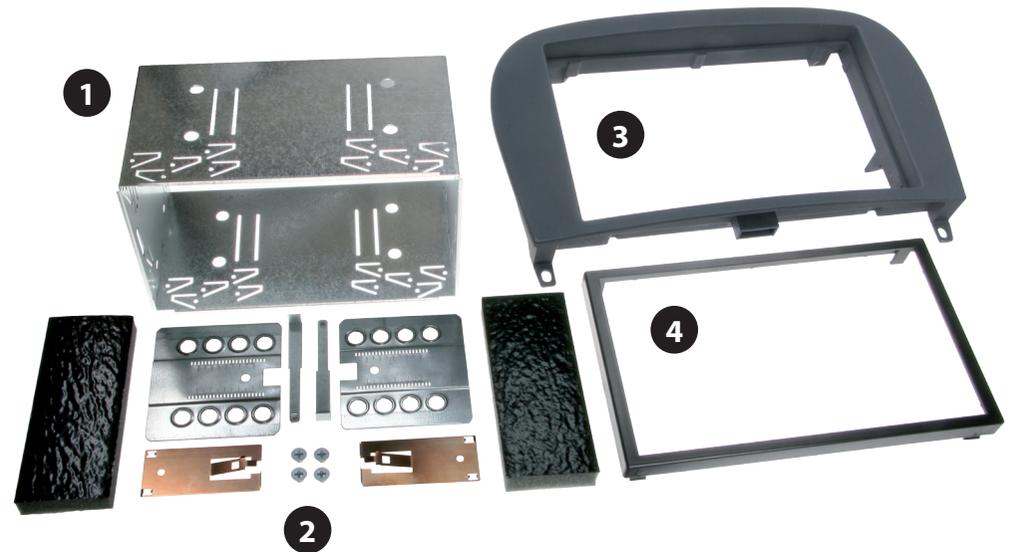

Double DIN Set contents


- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate
- (4) Trim Frame

# Installation Manual Double DIN Kit 2190-25-RT

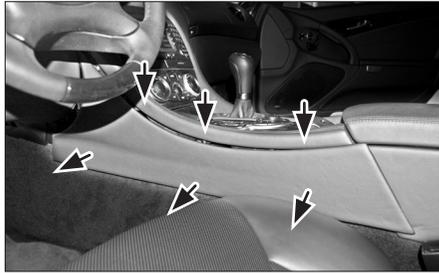



1. Remove the side panels at each side by pulling them towards your direction.

2. Remove the 6 Torx (TX20) screws. (3 screws (a) (b) (c) on each side)

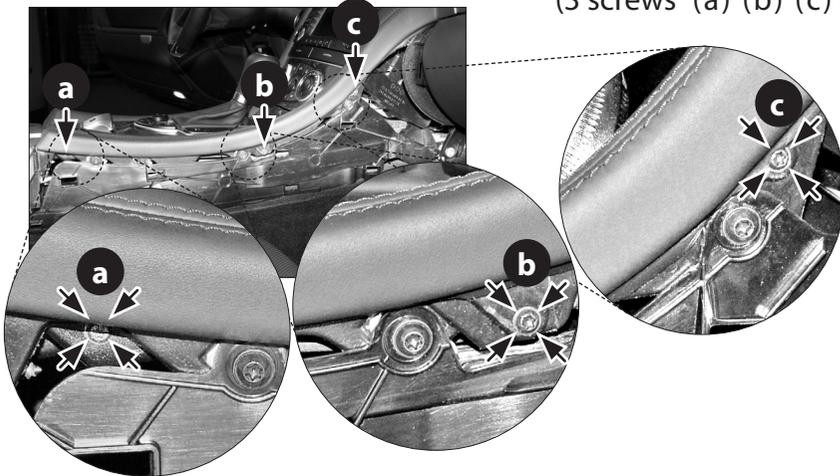


3. Remove the middle part of the centre console.

Disconnect all plugs.

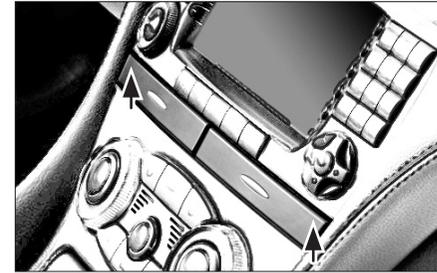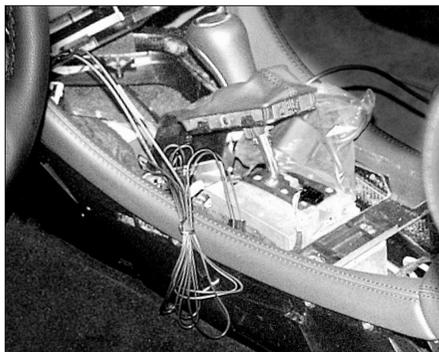


4. Open both cup holders. Remove the 2 Torx TX20 screws (which become visible after removing the centre console)

Remove the cup holders.

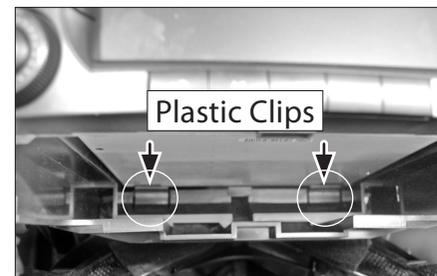


5. Press the 2 plastic clips (see arrows) located under the OEM-Radio.

Remove the OEM-Radio.

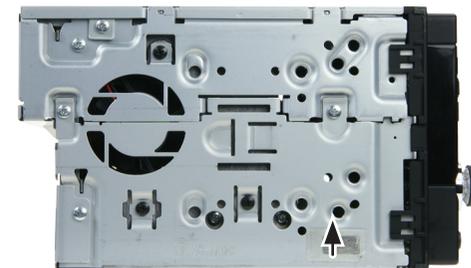

Mount the metal brackets with the double DIN head unit

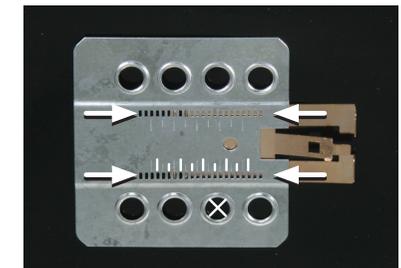

*The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)*

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.