


• Suzuki Swift Sport 2007 →

Compatible with these Kenwood double DIN devices

Kenwood Navigation

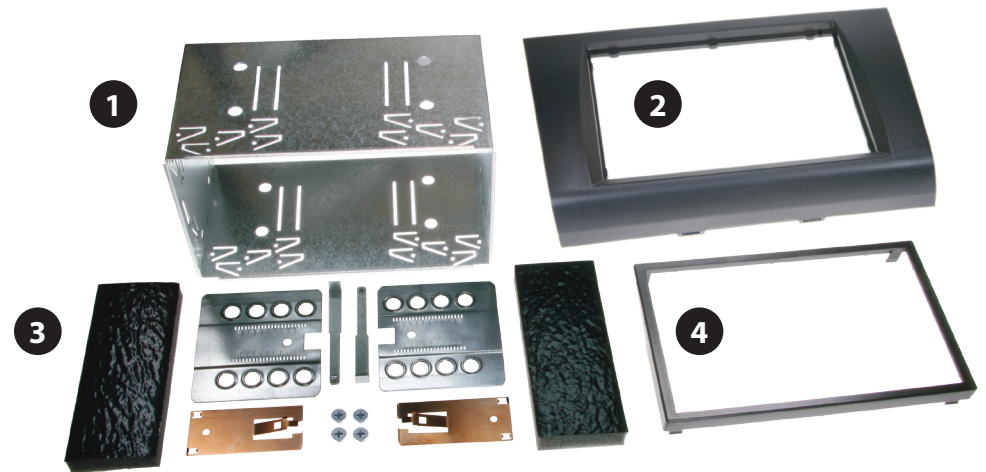

Double DIN kit. Table of content

- Metal frame (1)
- Facia plate (2)
- Installation kit (3)
- Trim frame (4)

1




Car with OEM head unit.

2




Remove dashboard cover under the steering wheel by pulling towards seat (see arrows).

7

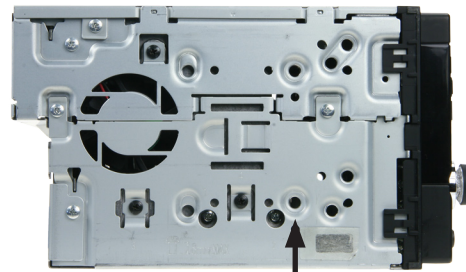

Mount the metal brackets with the double DIN head unit

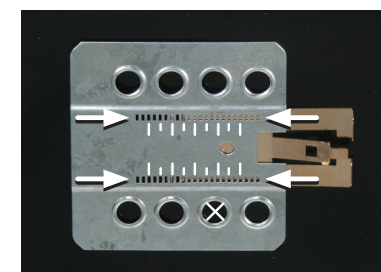

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)

3




Open the glove box and remove it by pulling towards seat.

4



Remove locknut from head unit. (passenger side underneath the dashboard)

5

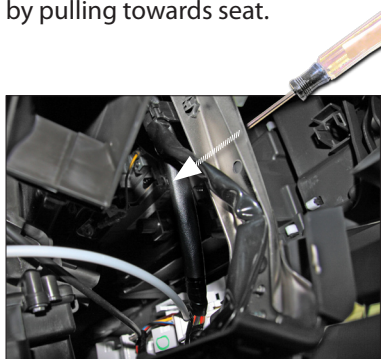


Remove locknut from head unit (driver's side underneath the dashboard). Place the screw driver BEHIND the frame as shown on the picture

6



Remove OEM head unit.

8

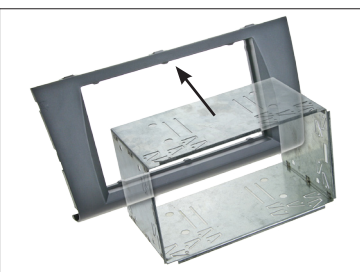

Place the Double-DIN facia plate at the dashboard, move metal bracket into the facia plate.

9



Connect alle required circuit points and wires. Push the double DIN head unit until it snaps in. Place plastic radio trim. Place back all panels in reverse order.

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.