

## Installation Manual Double DIN Kit

Standard: CAW 2320-13 Rubber-Touch: CAW 2320-13-RT

• Audi A6 2001-2004

Compatible with these Kenwood double DIN devices

## **Kenwood Navigation**



## **Double DIN Kit contents**

- (1) Metal Frame
- (2) Facia Plate

Installation Kit (3) Trim Frame (4)

All installation work must be performed by a qualified professional installer only.

The manufacturer / dealer is not liable for any kind of incidential or indirect damages.

© 12/2008 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

## **Installation Manual Double DIN Kit CAW 2320-13**



 "Audi Navigation Plus" OEM head unit



2. Use 4 radio release keys to dismount the OEM radio.




3. Remove the OEM radio.



(sample)

Mount the metal brackets with the double DIN head unit

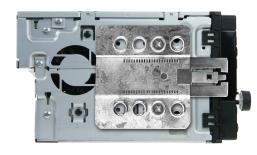



(sample)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



4. Push the metal frame into the facia plate

Place it on the dashboard. Press the facia plate, until it snaps in.



Connect alle required circuit points and push the double DIN head unit until it snaps in.

Place the trim frame to finish installation.