


Porsche 911 (type 996) 1997-2006 (with PCM)
For models without cupholder only

Compatible with these Kenwood double DIN devices

Kenwood Navigation

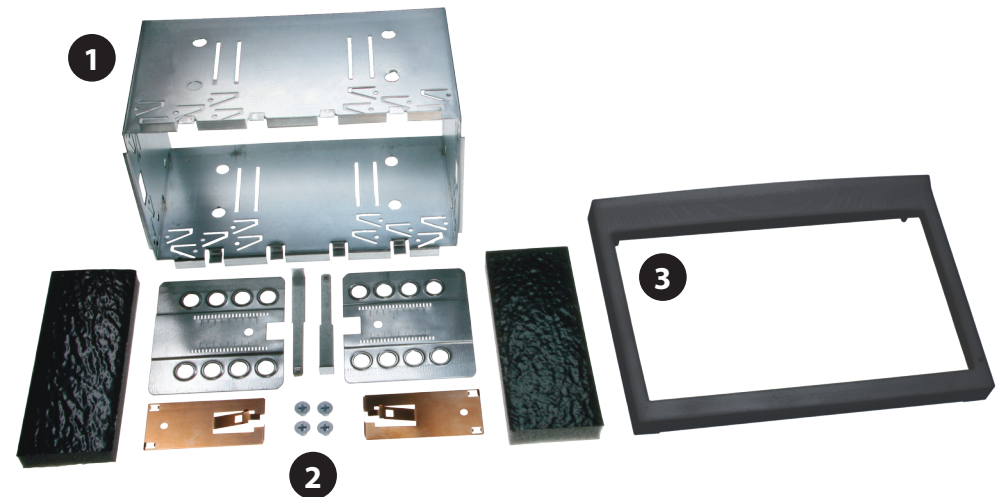

Double DIN Set contents


- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate

Models with PCM system




- 1. Insert Porsche radio release keys in the holes of the PCM head unit.

Remove OEM head unit by pulling it towards your direction.

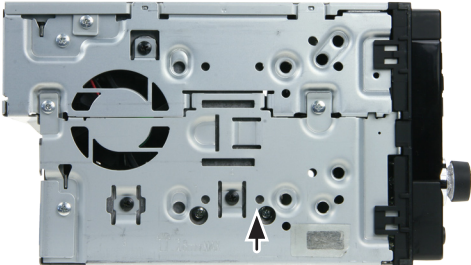

(sample)

Mount the metal brackets with the double DIN head unit

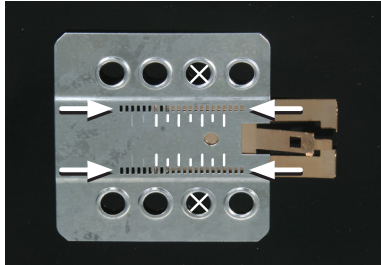


(sample)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



- 2. Place the fascia plate on the dashboard. Push the metal frame into the fascia plate. Connect all required circuit points and push the double DIN head unit until it snaps in. Place the trim frame.

Reinstall everything in reverse order.

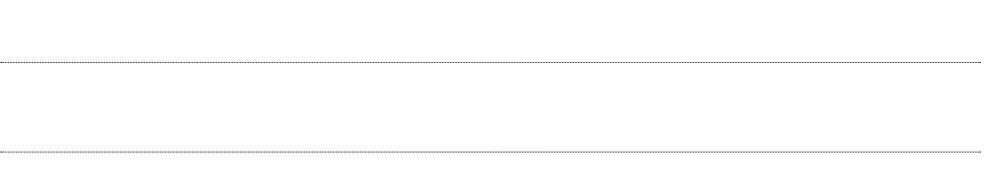

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.